

**Single Knife Edge™ (SKE)
Recessed Channel Mechanism
(RCM) Door**

Maintenance Guide



ETS-Lindgren Inc. reserves the right to make changes to any product described herein in order to improve function, design, or for any other reason. Nothing contained herein shall constitute ETS-Lindgren Inc. assuming any liability whatsoever arising out of the application or use of any product or circuit described herein. ETS-Lindgren Inc. does not convey any license under its patent rights or the rights of others.

© Copyright 2002–2018 by ETS-Lindgren Inc. All Rights Reserved. No part of this document may be copied by any means without written permission from ETS-Lindgren Inc.

Trademarks used in this document: The *ETS-Lindgren* logo and *Single Knife Edge* are trademarks of ETS-Lindgren Inc.

Revision Record

MANUAL,SKE DOOR MAINT.W/MSDS SHEETS | Part #100513, Rev. C

Revision	Description	Date
A	Initial Release	April, 2002
B	Rebrand	August, 2013
C	Added E-Latch Replacement	October, 2018

Table of Contents

Notes, Cautions, and Warnings	vi
1.0 Introduction	8
ETS-Lindgren Product Information Bulletin	8
2.0 About Maintenance	10
Replacement and Optional Parts	10
Service Procedures	10
3.0 Regular Maintenance Schedule	12
Customer-Supplied Tools and Supplies (Not Included).....	13
Weekly: Door Leaf Knife Blade	13
Monthly: Receiver Channels	14
Every Six Months: Fingers, Cams, Hinges, Handles	15
Contact Fingers	15
Roller Cams and Cam Blocks.....	15
Door Handle/Spindle Assembly	15
Annually: Finger Stock.....	16
4.0 Finger Stock Repair and Replacement	18
Replace Damaged or Broken Finger Stock	19
All Doors, Including Type D and E Doors	19
Replace Finger Stock in Sill—Type D and E Doors Only	20
Replace All Finger Stock and Vinyl Seal	21
5.0 Activating and Replacing E-Latch Blocks	24
Activating E-Latch Blocks	24
Re-installing E-Latch Blocks	24
Re-adjusting Pin Assembly	25
Appendix A: Warranty	26

This page intentionally left blank.

Notes, Cautions, and Warnings

	<p>Note: Denotes helpful information intended to provide tips for better use of the product.</p>
<p>CAUTION</p>	<p>Caution: Denotes a hazard. Failure to follow instructions could result in minor personal injury and/or property damage. Included text gives proper procedures.</p>
<p>WARNING</p>	<p>Warning: Denotes a hazard. Failure to follow instructions could result in SEVERE personal injury and/or property damage. Included text gives proper procedures.</p>



See the ETS-Lindgren *Product Information Bulletin* for safety, regulatory, and other product marking information.

This page intentionally left blank.

1.0 Introduction

Each **ETS-Lindgren Single Knife Edge™ (SKE) Recessed Channel Mechanism (RCM) Door** is manufactured to precise standards and tolerances and is designed for high performance and durability. This guide provides the steps to perform periodic maintenance that is intended to prevent a problem from occurring in the future, eliminate the need for costly repairs, and to avoid costly down time.

ETS-Lindgren Product Information Bulletin

See the ETS-Lindgren *Product Information Bulletin* included with your shipment for the following:

- Warranty information
- Safety, regulatory, and other product marking information
- Steps to receive your shipment
- Steps to return a component for service
- ETS-Lindgren calibration service
- ETS-Lindgren contact information

This page intentionally left blank.

2.0 About Maintenance

CAUTION

Before performing any maintenance, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.



Maintenance of the SKE RCM Door is limited to the components described in this guide.

Warranty may be void if the instructions in this maintenance guide are not followed.

If you have any questions concerning maintenance, contact ETS-Lindgren Customer Service.

Replacement and Optional Parts



ETS-Lindgren may substitute a similar part or new part number with the same functionality for another part/part number. Contact ETS-Lindgren for questions about part numbers and ordering parts.

Following are the part numbers for ordering replacement or optional parts for the Single Knife Edge™ (SKE) Recessed Channel Mechanism (RCM) Door.

Part Description	Part Number
SKE Door Maintenance Kit	206538

Service Procedures

For the steps to return a system or system component to ETS-Lindgren for service, see the *Product Information Bulletin* included with your shipment.

This page intentionally left blank.

3.0 Regular Maintenance Schedule

CAUTION

Before performing maintenance, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.

CAUTION

When working with solvents, always use eye protection and protective clothing, and make sure there is proper ventilation.

CAUTION

Do not polish the brass or beryllium copper finger stock with steel wool, an electric sander, wire brush, or any abrasive material or device.

Do not polish the brass striking surfaces with any type of brass polish.

Do not apply floor wax to the door sill. Take care when waxing floors inside and outside the enclosure to avoid applying wax to the door sill or threshold.



Do not use an excessive amount of solvent. The contact fingers on the door are attached with adhesive. Any over-application of solvent other than as described in the following steps may disrupt the adhesive and cause the contact fingers to fall off.



If a source of clean, dry, oil-free air is available, it may be applied to speed drying time.

Customer-Supplied Tools and Supplies (Not Included)

CAUTION

Use all cleaning agents in accordance with the manufacturer's instructions.

The following item is not included in the SKE Door Maintenance Kit (part# 206538):

- Cleaning agent: Acetone, denatured alcohol, or similar solvent

Weekly: Door Leaf Knife Blade

1. Use a scour pad to remove residue and clean the knife blade on the door leaf.
2. Clean the knife blade with a soft cloth soaked with acetone or similar solvent.
3. Lightly spray the knife edge with silicon lubricant.

Monthly: Receiver Channels

CAUTION

Do not slide putty knife and cloth across finger stock when performing these steps.

1. Lightly dampen a clean, soft cloth with solvent.
2. Completely cover the blade portion of a 3-in putty knife.
3. To remove built-up dirt from the contact fingers, start at the top center of the door:
 - **For the upper and lower horizontal receiver channels**—Insert the putty knife with cloth into the receiver channel and work it towards a corner with an in-and-out motion; repeat in the opposite direction.
 - **For the vertical receiver channels**—Insert the putty knife with cloth into the top of the channel and work down to the bottom; repeat for the opposite channel.
4. Allow the solvent to evaporate, and then repeat the entire procedure.

Every Six Months: Fingers, Cams, Hinges, Handles

CAUTION

Do not move the sanding assembly side-to-side or up-and-down. The edges of the sanding paper will snag and damage the contact fingers.

CONTACT FINGERS

1. Fold a piece of 320 grit emery cloth over a 3-in putty knife with the sanding surfaces facing out.
2. Slide the sanding assembly straight into and between the rows of contact fingers located in the knife edge receiver channel. With two or three strokes, burnish the surfaces of the contact fingers.
3. Move to the next section, and with a 1/2-in overlap, repeat this procedure around the entire perimeter of the knife edge receiver channel. Be sure to burnish both rows of finger stock.
4. Remove the residue with a soft cloth soaked with solvent and wrapped around a 3-in putty knife, as described in the monthly maintenance steps on page 14.

ROLLER CAMS AND CAM BLOCKS

Inspect the roller cams and cam blocks to confirm that a thin film of lubricant is present. If additional lubricant is required, apply a thin film of grease.

DOOR HANDLE/SPINDLE ASSEMBLY

CAUTION

The hinges and door handles are permanently lubricated and require no additional lubricant. Do not lubricate hinges or door handles.

Check periodically for any loose bolts and any wear or play on the door handle/spindle assembly.

Annually: Finger Stock



The necessity to replace finger stock varies, depending on environmental conditions and door use. For optimum RF performance, replace finger stock every one to two years.

(Optional) Replace the finger stock around the entire perimeter of the recessed contact mechanism (RCM). See page 18 for the steps to replace finger stock.

This page intentionally left blank.

4.0 Finger Stock Repair and Replacement

CAUTION

Before performing maintenance, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.




The necessity to replace finger stock depends on environmental conditions and door use. For optimum RF performance, replace finger stock every one to two years.

Replace Damaged or Broken Finger Stock

ALL DOORS, INCLUDING TYPE D AND E DOORS



It is not necessary to remove the door to replace damaged or broken finger stock.

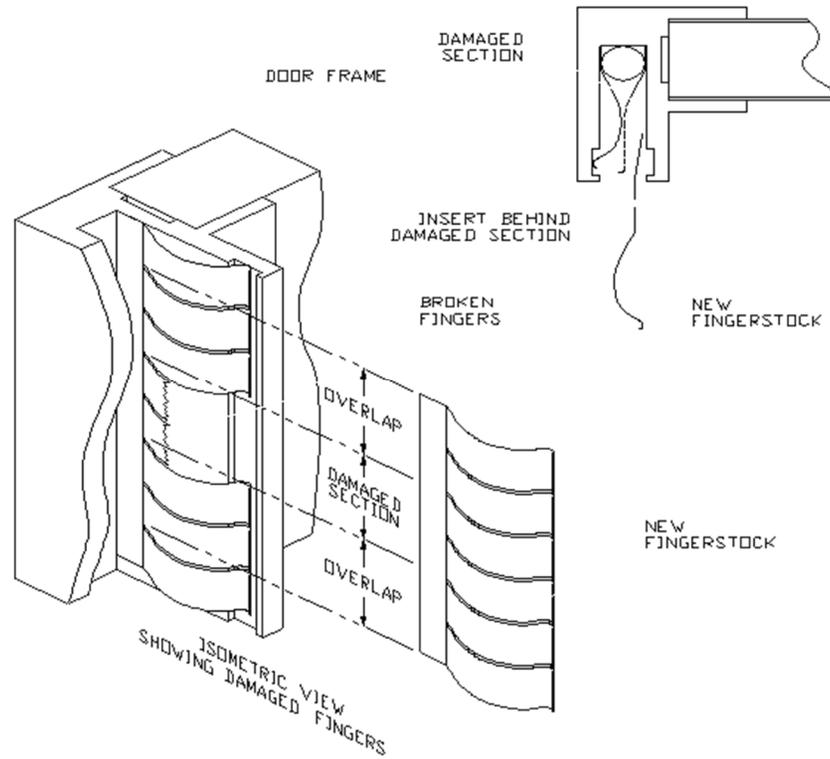

Finger stock replacement detail

1. Remove broken or loose pieces with needle-nose pliers.
2. Cut a new section of finger stock to a length with at least one finger overlapping on each end of the old finger stock.
3. Install the new finger stock by inserting it behind the damaged section.

REPLACE FINGER STOCK IN SILL—TYPE D AND E DOORS ONLY

In addition to performing the steps in the previous section, perform these steps for Type D and E doors only.



It is not necessary to remove the door to replace finger stock in the sill.


1. Finger stock is soldered on the removable brass angle at the bottom of the door. Remove all screws at the bottom edge of the door to remove finger stock angle.
2. Use a sharp instrument (for example, a pen knife) to remove the section of broken fingers.

CAUTION


Make sure that the solder does not flow to the fingers; this may cause them to break when in use.

3. Reinstall new finger stock by overlapping one finger at each end of the old finger stock. Solder the perforated area of a new finger to the brass plate.

Replace All Finger Stock and Vinyl Seal

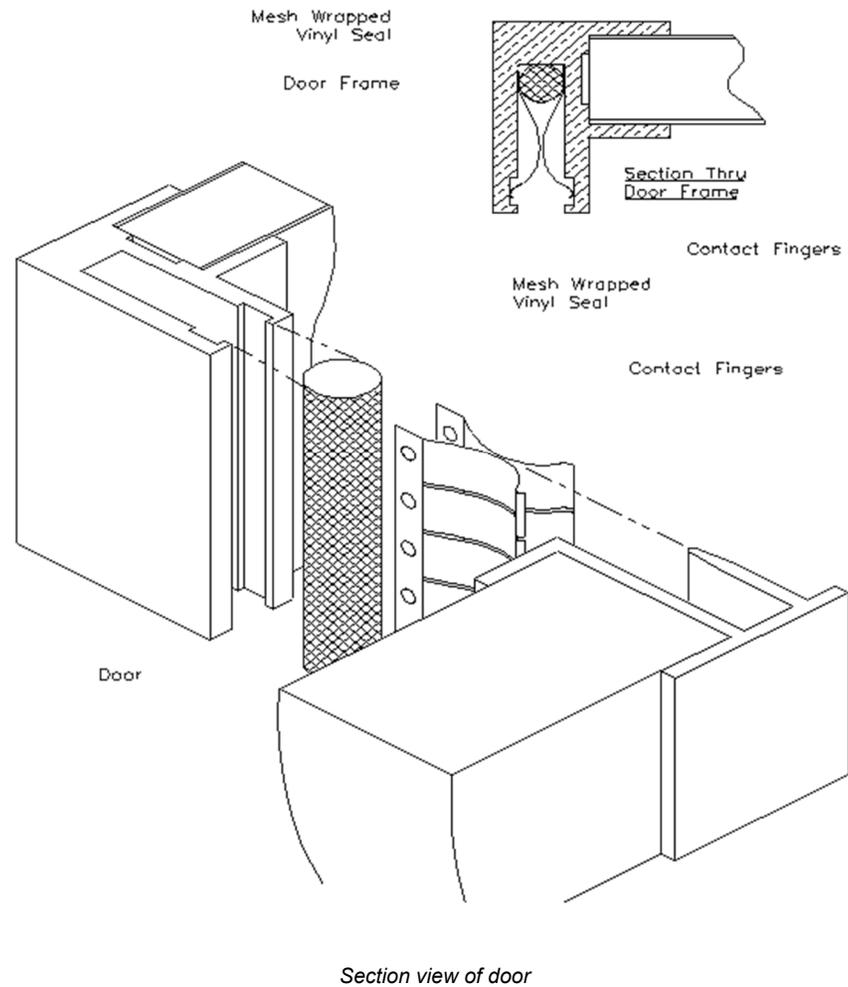

1. Use needle-nose pliers to remove old finger stock and vinyl seal.
2. Clean receiver channel with abrasive pad.
3. Use a clean cloth dampened with cleaning agent to wipe the receiver channel clean.

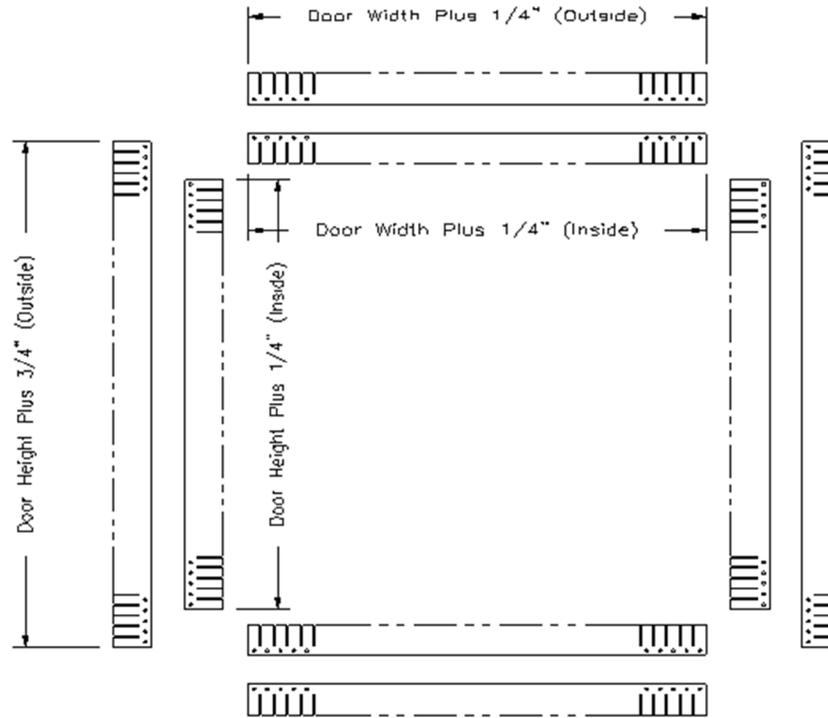

Finger stock insertion guide

4. Cut exact lengths of finger stock for each of the four sides of the channel.
5. Cut an exact length of vinyl seal for the entire perimeter of the door.
6. Install the first row of finger stock: Start in upper left corner and move down the entire side of the frame.

Insert the second row of finger stock: Start in the upper left corner and move down the entire side of the frame.

Gently press the fingers into position one at a time until they are locked in place.
7. Repeat step 6 for each of the remaining three sides of the channel.

8. Install the vinyl seal by inserting it into the channel opening: Start in the middle of the side of the frame and move around the frame so that the vinyl seal completely covers the finger stock.

CAUTION

Carefully insert the vinyl seal behind one finger at a time.

9. Use the putty knife to gently push the vinyl seal between the two rows of finger stock and into final position at the base of the channel.

5.0 Activating and Replacing E-Latch Blocks

CAUTION

Before performing maintenance, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.

Activating E-Latch Blocks

The operation of the door is protected by means of a complete manual over-ride capability. It is possible to open the door in the event of loss of electrical power by means of two (2) (or more, if door model features more) emergency manual mechanisms.

For emergency release:

- Pull handle to a horizontal position and then toward the operator.
- It will disengage the block and handle from the door frame, enabling the door to be opened.
- This emergency system is operable from both sides of the door.

Re-installing E-Latch Blocks



Standard flat screwdriver required.


1. Slip the outer block with the red handle in the horizontal position over the pin that is extending out of the hole in the doorjamb.
2. Align the red handled lever rod with the groove that is in the emergency release pin.
3. Move it to the vertical position. This will lock the pin with the release handle.
4. Push the outer latch assembly flush with the jamb face as far as possible, and repeat the same procedure as explained in No. 1, (above) using the inside block assembly. If the latching assembly does not appear to be tight enough or so tight that it cannot be moved to the vertical (locked) position, readjust the slot end of the release pin.

Re-adjusting Pin Assembly

1. Pull the red handle on the inside of the room to a horizontal position. If the assembly is loose, use a standard flat screwdriver and turn the slot end of the pin $\frac{1}{4}$ turn clockwise and move the red handle to the locked position.
2. If the assembly is still loose, repeat the above operation.
3. If the latching assembly is too tight and will not latch, repeat the same procedure but turn the slot counter-clockwise $\frac{1}{4}$ turn at a time until the assembly is firmly in position.



Do not over tighten the assembly or use excessive force to latch the red lever into the assembly; this will damage the assembly.

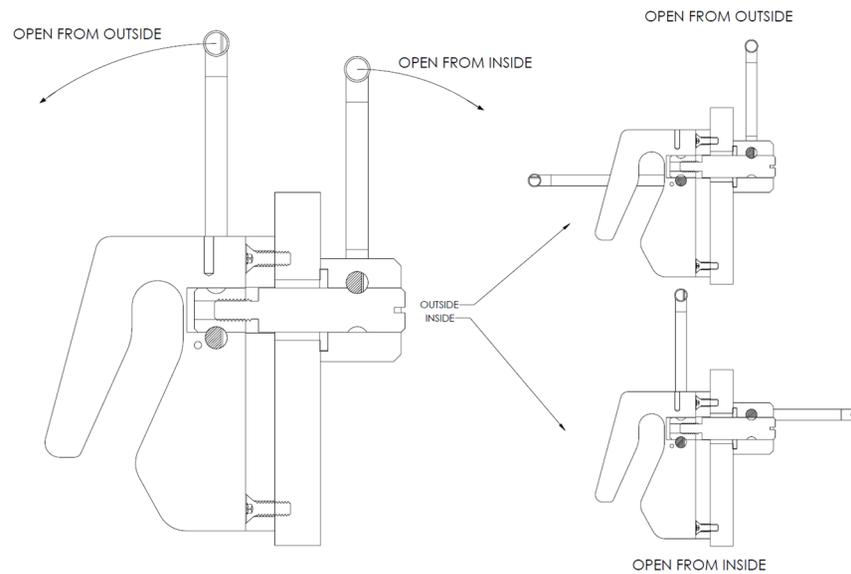

Appendix A: Warranty



See the *Product Information Bulletin* included with your shipment for the complete ETS-Lindgren warranty for your SKE RCM Door.

DURATION OF WARRANTIES FOR SKE RCM DOOR

All product warranties, except the warranty of title, and all remedies for warranty failures are limited to one year.

Product Warranted	Duration of Warranty Period
Single Knife Edge™ (SKE) Recessed Channel Mechanism (RCM) Door	1 Year